

## **GENERAL INSTRUCTIONS**

- 1-1 Before starting up the appliance, carefully read the following instructions.
- 1-2 The machine is designed for professionals and must be used only by skilled personnel.
- Keep the appliance well clear of water jets, damp areas and heat sources. 1-3 NEVER UNDER ANY CIRCUMSTANCES PLACE YOUR HANDS IN THE
- BLENDER CUP WHEN IT IS FITTED ON THE APPLIANCE BODY.
- 1-5 NEVER FIT THE BLENDER CUP BASE ON THE APPLIANCE BODY.
- Never use ice cubes or frozen fruit. (excluding the PA10 range) 1-6
- Always consult a qualified electrician for repairs and maintenance. 1-7

#### **DESCRIPTION OF APPLIANCE (Fig. 1)** 2

- A) Inspection plug
- B) Cover
- C) Containers: Plastic (P100 range)
  - Stainless steel (ranges P102 P103 P105 PA10)
- D) Container gasket
- Knife support
- E) F) G) Container base
- Machine body H) Switch (fig. 4)
- Mixer support (fig. 3)

# INSTALLATION

- Installation must be carried out in strict compliance with the provisions of 3-1 law currently in force in the country of use, with particular reference to said country's accident and fire-prevention requirements and electricity authority regulations.
- Before connecting the appliance to the mains supply, make sure that the volt-3-2 age indicated on the data plate is commensurate with that of the mains supply.
- 3-3 Carefully clean all the components (see point 5).

manufacturer's guarantee null and void.

- Make sure the switch is set to "0".
- 3-5 Insert the plug in the power inlet. Tampering with the appliance or failure to comply with the relative connec-3-6 tion requirements causes undue danger and consequently renders the

# **OPERATION**

- Insert the cup with cover into the machine body (filled to a maximum of 2/3 capacity), aligning the magnetic support with the rod (Fig. 2), and put the switch in position "1" or "2" (P105 position "1"). For the mixer with continuos variable speeds (P100V - P102V - P103V - PA10V), turn on the machine by rotating the switch clockwise and increasing the speed gradually to the required setting.
- 4-2 In the electric mixer from the PA10 range, before activating the switch or the speed regulator, press the round button several times for one or two seconds.

- To ensure correct operation, stop the blender for 2 minutes every 6 minutes 4-3 of operation.
- To blend hard products such as carrots, only fill the cup to one third its 4-4 total capacity.
- 4-5 On completion of blending, switch off the appliance and wait a few seconds before removing the cup.
- Only use the appliance to liquidise vegetables or blend liquids. 4-6

# CLEANING

- ALWAYS REMOVE THE PLUG FROM THE POWER INLET BEFORE CLEANING 5-1 THE APPLIANCE.
- 5-2 Detach all removable parts from the appliance and hand wash in soapy water (never clean in the dishwasher).
- Clean the appliance body with a damp cloth (never immerse the appliance 5-3 in water).
- For best results, always clean the appliance immediately after use. 5-4
- 5-5 To detach the blender cup, simply unscrew the base in a counter-clockwise direction and always check the seal for wear before refitting. WARNING: the blades are very sharp and must therefore always be handled with due care.

## **FURTHER INSTRUCTIONS**

- Packing disposal: following removal of the appliance from its packing, dispose of said packing in compliance with the standards currently in force in the coun-6-1 try of use.
- Appliance disposal: When the appliance reaches the end of its service life, do 6-2 not discard in the environment, but rather dismantle and dispose of the appliance in accordance with the regulations governing the various materials used for its construction. We recommend that such operations be performed by a qualified waste disposal company
- DO NOT DISCARD IN THE ENVIRONMENT. 6-3

### WARRANTY

7

- The machine is guaranteed for a period of 12 months from the date of purchase.
- Defects resulting from normal wear or caused by improper use of the appliance 7-2 are not covered by the warranty.
- Tampering with the appliance will automatically invalidate the warranty. 7-3